



990 U.S. 27 Venus, FL 33960 United States
sales@storageandcanopy.com
+1 (321) 710-0804
www.storageandcanopy.com

Shipping Container Roof Double Truss Round Style Model# C6040DTR 60'x40'x15' (5' arch space) Assembly Instructions





**STORAGE
CANOPY**



990 U.S. 27 Venus, FL 33960 United States

sales@storageandcanopy.com

+1 (321) 710-0804

www.storageandcanopy.com

Equipment List

Speed Wrench 22#.23#.24#	
Hammer (30lb)	
Rope (12#)	
Long Tape (50m)	
Hammer Drill*1	
Lifter*2	
Crane*1	
Forklift*1	
Protective equipment	



990 U.S. 27 Venus, FL 33960 United States
sales@storageandcanopy.com
+1 (321) 710-0804
www.storageandcanopy.com

YOU MUST READ THIS DOCUMENT BEFORE YOU BEGIN TO ASSEMBLE THE SHELTER.

Thank you for purchasing our shelter. When properly assembled and maintained, this product will provide years of reliable service. These instructions include helpful hints and important information needed to safely assemble and properly maintain the shelter. Please read these instructions **before** you begin.

If you have any questions during the assembly, please contact local dealer for assistance.

SAFETY PRECAUTIONS

- . Wear eye protection.
- . Wear head protection
- . Wear gloves when handling metal tubes
- . Use a portable GFCI (Ground Fault Circuit Interrupter) when working with power tools and cords.
- . Do not climb on the shelter or framing during or after construction.
- . Do not occupy the shelter during high winds, tornadoes, or hurricanes.
- . Provide adequate ventilation if the structure is enclosed.
- . Do not store hazardous materials in the shelter.
- . Provide proper ingress and egress to prevent entrapment.

ANCHORING INSTRUCTIONS

Prior to assembling this shelter, please read the **MUST READ** document included with the shipment.

⚠ WARNING: The anchor assembly is an integral part of the shelter construction. Improper anchoring may cause shelter instability and failure of the structure. Failing to anchor the shelter properly **will void the manufacturer's warranty** and may cause serious injury and damage.

LOCATION

Choosing the proper location is an important step before you begin to assemble the structure.

The following suggestions and precautions will help you determine whether your selected location is the best location.

- . Never erect the structure under power lines.
- . Identify whether underground cables and pipes are present **before** preparing the site or anchoring the structure.
- . Location should be away from structures that could cause snow to drift on or around the building
- . Do not position the shelter where large loads such as snow and ice, large tree branches, or other overhead obstacles could fall.
- . Your shelter's cover can be quickly removed and stored prior to severe weather conditions. If strong winds or severe weather is forecast in your area, we recommend removal of cover.

SITE

After choosing a location, proper preparation of the site is essential. The following site characteristics will help ensure the integrity of the structure.

- . The support structure must be level to properly and safely erect and anchor the frame.
- . Drainage: Water draining off the structure and from areas surrounding the site should drain away from the site to prevent damage to the site, the structure, and contents of the structure.

⚠ WARNING: The individuals assembling this structure are responsible for designing and furnishing all temporary bracing, shoring and support needed during the assembly process. For safety reasons, those who are not familiar with recognized construction methods and techniques **must seek the help of a qualified contractor.**

ANCHORING THE CONTAINER

Make sure you have:

- Welder.
 - Cement.
 - Four 3" x 3" x 6 feet 1/4" Square steel angle
1. As shown in the diagram 1, make a 3 ft deep hole right beside one of the front and opposite rear corners of the container, in which the 6ft square steel will be installed.
 2. Insert the 6ft square steel into the hole, making sure 3ft is below the surface completely laying on the side of the containers.
 3. Weld the square steel to the 2 containers.
 4. Pour cement in the holes to make sure the square steel won't move.
 5. Repeat the previous steps on the corners located in the opposite rear side.

Securing the containers to the floor is crucial, that way the containers won't shift under harsh weather conditions, thus avoiding the shipping container canopy roof top of getting damaged.

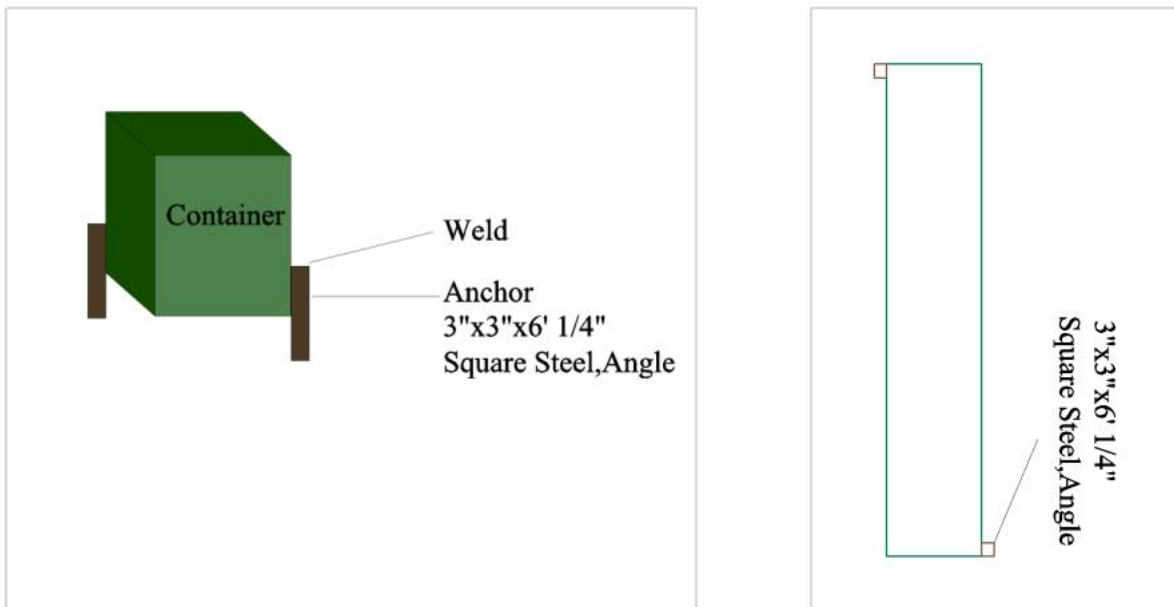


Diagram 1



990 U.S. 27 Venus, FL 33960 United States
sales@storageandcanopy.com
+1 (321) 710-0804
www.storageandcanopy.com

Highly Recommended

1. All container canopy covers need to be removed during windstorm of 60 mph, leaving frame assembled. **Customer responsibility.**
2. All container canopy covers need to be removed before a snowstorm of 1-2 inches (for single truss Shipping container roofs) and 3-4 inches (for double truss Shipping container roofs), leaving the frame assembled. **Customer responsibility.**
3. It is highly recommended for customers who live in snow states and cities to use double truss framing instead of Single truss framing. **Customer responsibility.**
4. It's the owner's responsibility to shovel snow off the canopy rooftop.
5. All containers need to be anchored to the ground in each opposite corner sides. **Customer responsibility.**
6. All of our products fall under the temporary structure category/storage ragtops.

Return Policy: Any product can be returned within 7 calendar days after arrival; shipping expenses are not refundable. For more information, please refer to the **Return and refund policy** page.








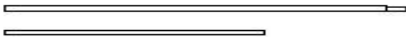





About lifespan:





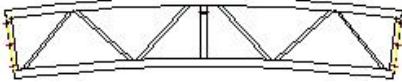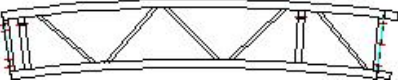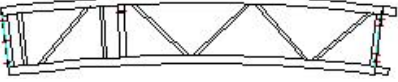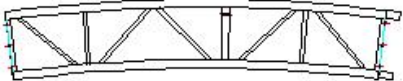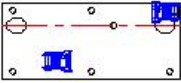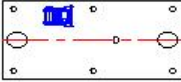






Tarp lifespan: 7-10 years*

Frame Lifespan: +15 years*

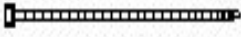****The term "lifespan" refers to the durability of the materials themselves, not to the structural integrity of the canopy once assembled.***

60'x40'x15' Parts List

Part Code	Description		Qty/ PCS	Box
Roof				
1	Top Truss Arch		9	B
2	Upper Truss Arch		18	A
3	Middle Truss Arch		18	A-10pcs B-8pcs
4	Lower Truss Arch		18	B
5	Base Plate left & right, four corners with ratchet		4	C
6	Base Plate, inner with ratchet		14	A-12pcs B-2pcs
7	Purlin		72	C
8	Lower Tensioning Tube for Roof Cover, (4+1) pcs/set		2 sets	C
9	Connection Plate for steel wire No.21		40	A
10	High Strength Bolt M14x35 for double truss arch connection		216	A
11	Bolt M10x70 for purlin connection		81	A
12	Tube Clip with bolt M10x50 for steel wire No.21		80	A
13	End Plug (Φ40) for tensioning tube No.8		4	A

14	Knitting Rope for roof cover (4 bundles)		1 pack	A
15	Belt for ratchet		18	A
16	Roof Cover		1	A
17	Felt Piece (self adhesive)		72	A
17A	Cable Tie for fixing felt No.17		150	A
18	Expansion Bolt		108	A
19	Turnbuckle for steel wire No.21		40	A
19A	Turnbuckle for steel wire No.21A		9	A
20	Steel Wire Clamp		134	A
21	Steel Wire between arches		40	A
21A	Steel Wire on roof top, 1+1 pc/set		9 sets	A

INSTALLATION PROCESS

Note: Make sure to fix the container firmly before installing the shelter.

A—BASE PLATES INSTALLATION

Please refer to the diagram (Figure 1) to mark the position of base plates


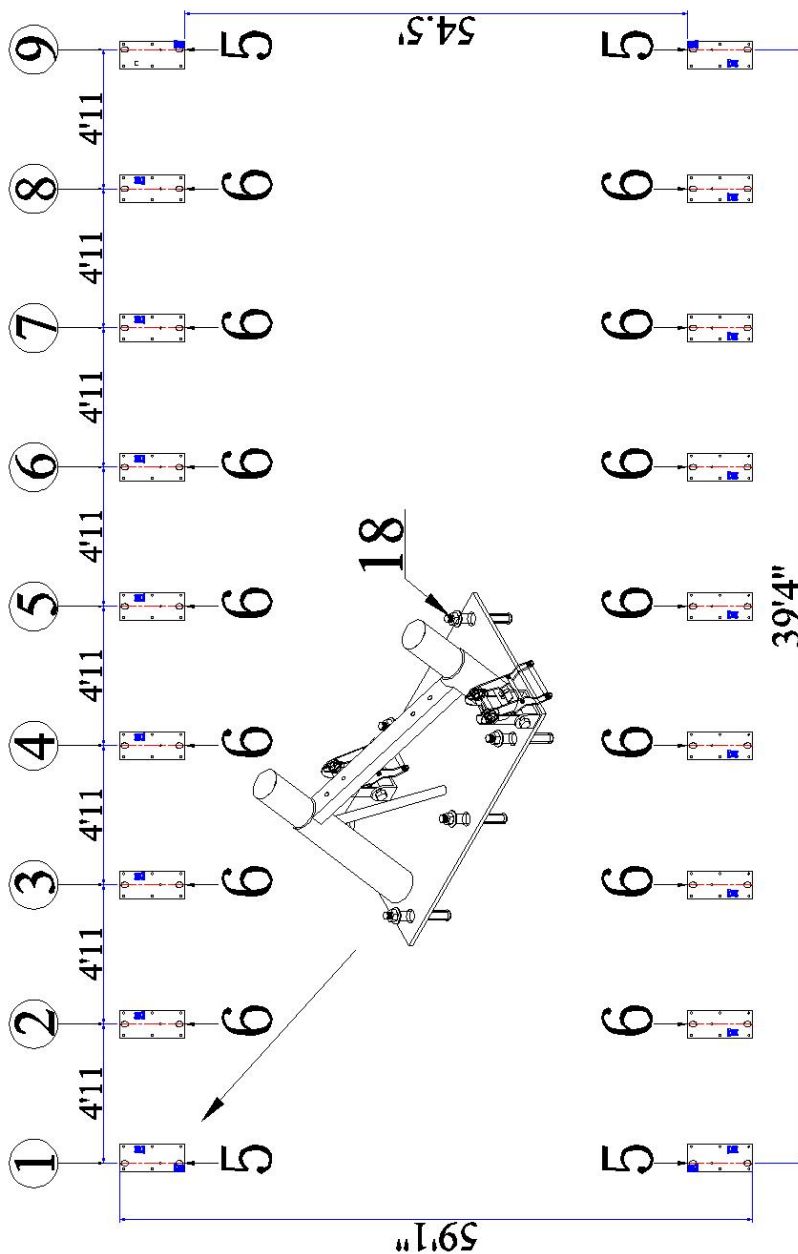


Figure 1


1. The measurement is done as the above figure 1 showing. Referring to the above diagram and confirm the place of base plates. ENSURE THAT THE FOUNDATION IS SQUARE.
2. The Four corners base plate (No.5) and the inner base plate (No.6) are welded on the top of container.

B—FRAME INSTALLATION

1. Arch Installation: Find Truss Arches (No.1, 2, 3, 4) and Base Plate (No.5 & 6) and connect them by High Strength Bolt M14x35 (No.10).
2. Install Steel Wire (No.21A) on the roof top by Turnbuckle (No.19A) and Steel Wire Clamp (No.20).

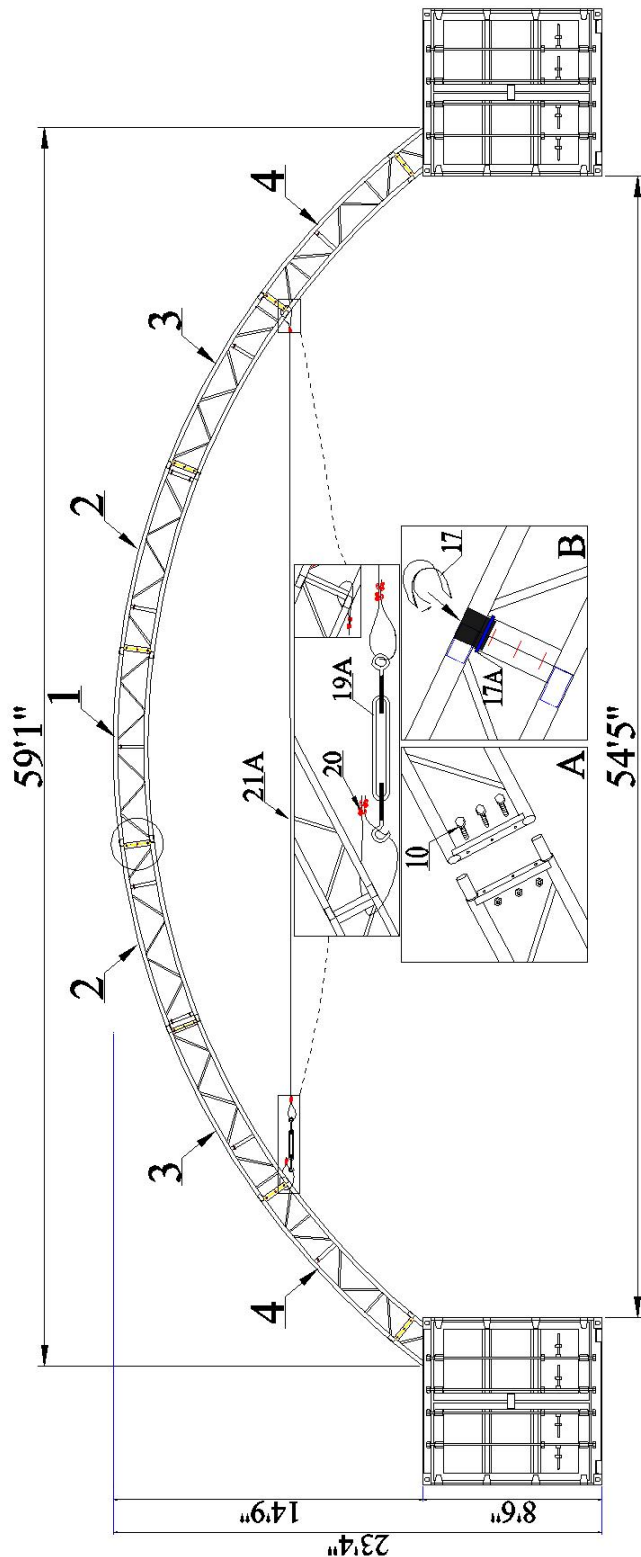

Purlin and Steel Wire between arches

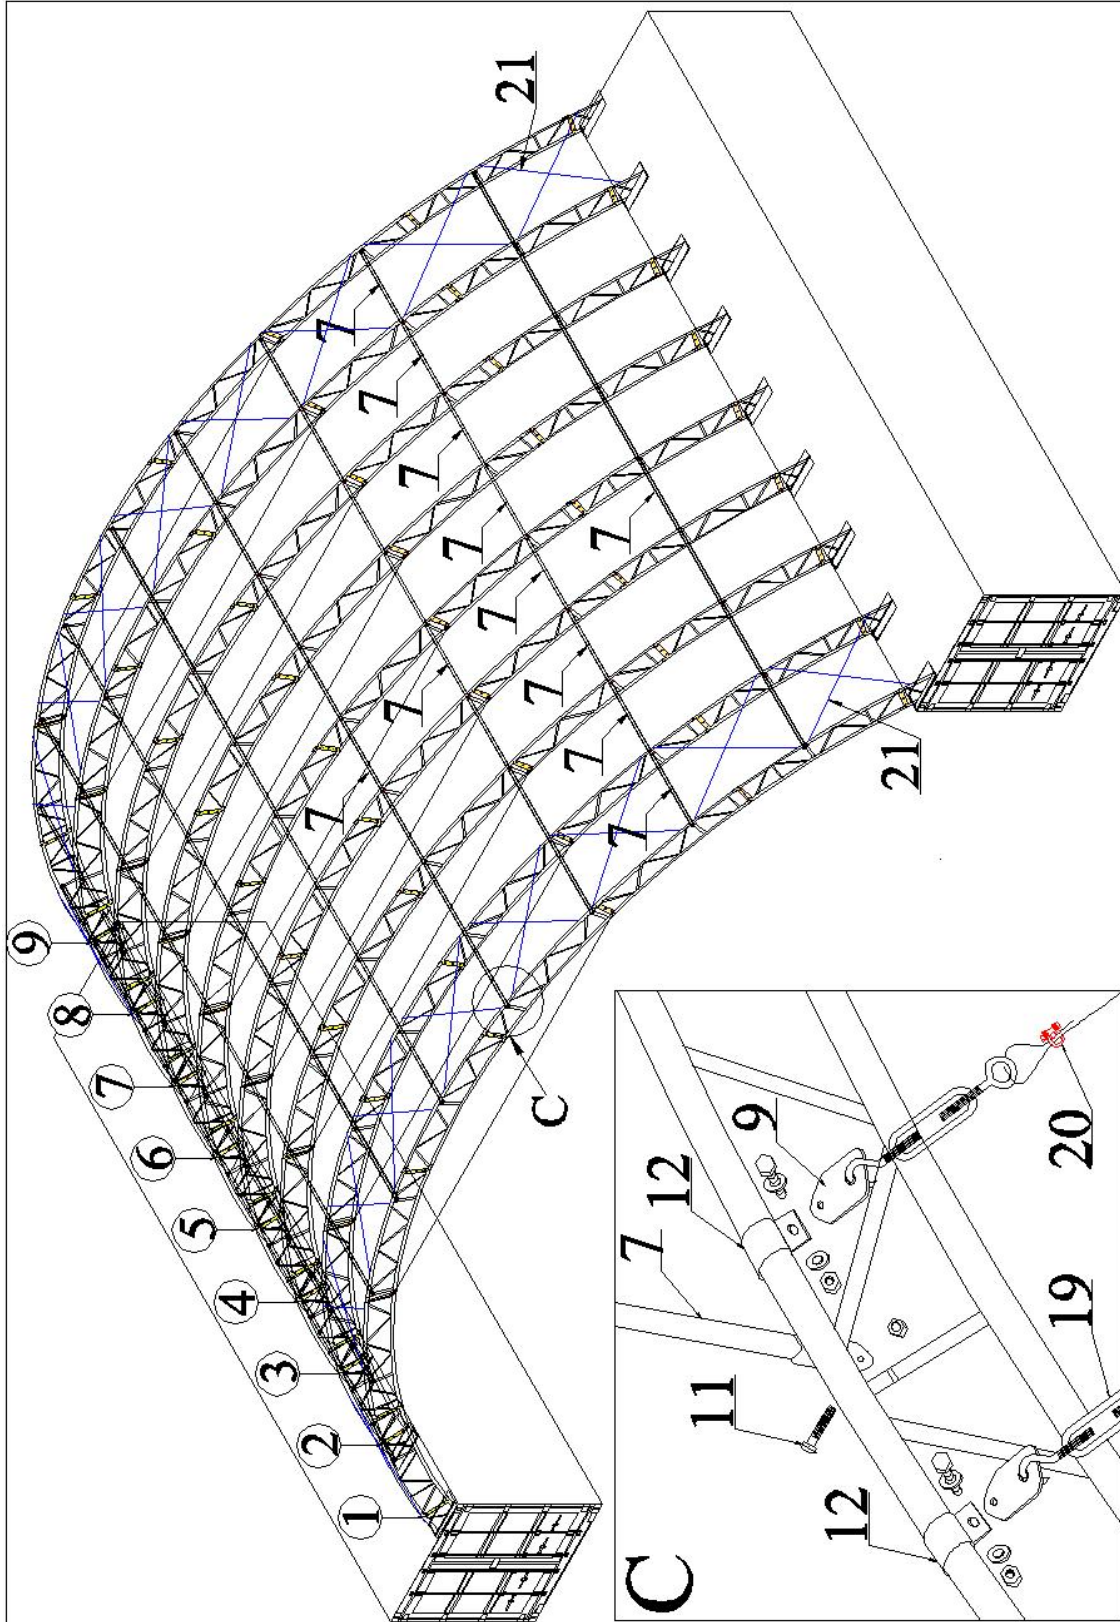



990 U.S. 27 Venus, FL 33960 United States
sales@storageandcanopy.com
+1 (321) 710-0804
www.storageandcanopy.com

2. When finish installing all arches, lift the arch to top of containers, and then adjust the distance between arches. Weld the base plate to container firmly.
3. Install Purlin (No.7) by Bolt M10x70 (No.11) and then the third arch and Purlins. In this turn, one arch and then purlin tubes.
4. Install Steel Wire (No.21) between arches by Tube Clip (No.12), Connection Plate (No.9), Turnbuckle (No.19) and Steel Wire Clamp (No.20).

IMPORTANT: THE WIDTH OF ARCHES SHOULD BE ADJUSTED BEFORE LIFTING.

C—COVER INSTALLATION

NOTE: DO NOT install the cover onto the frame of your building in high wind conditions. A slight breeze is the most advantageous for cover installation. To take advantage of the breeze, pull the cover up over the arches with the breeze blowing in the cover like a sail filled with air.


1. Roll out the roof cover on a ground sheet. Align the cover evenly to each end of the frame. Be sure doing not over pull the end of the roof cover.
2. Insert the Tensioning Tubes (No.8) into the cover pipe pockets. Pull the cover over the frame EVENLY, CAREFULLY AND SLOWLY. Cut openings on the pocket above the corresponding base plate and loosely secure the Belt (No.15) in the ratchet (being installed on base plates). DO NOT TIGHTEN. Adjust the cover so that it is square and evenly centered on the frame.

Note: The end flaps must overhang evenly at both ends.

3. Use Rope (No.14) to tighten roof cover to end arches. Rope should be cut as your requirements when using. When the cover is tidy and ready, drive the ratchet tie down forth and back and then roof cover is tightened. Pull the band inside the roof cover (four corners) by ratchet on base plate (No.5).

Note: if there is damage for cover when use, please repair it as soon as possible to avoid further damage.

Roof Cover Installation

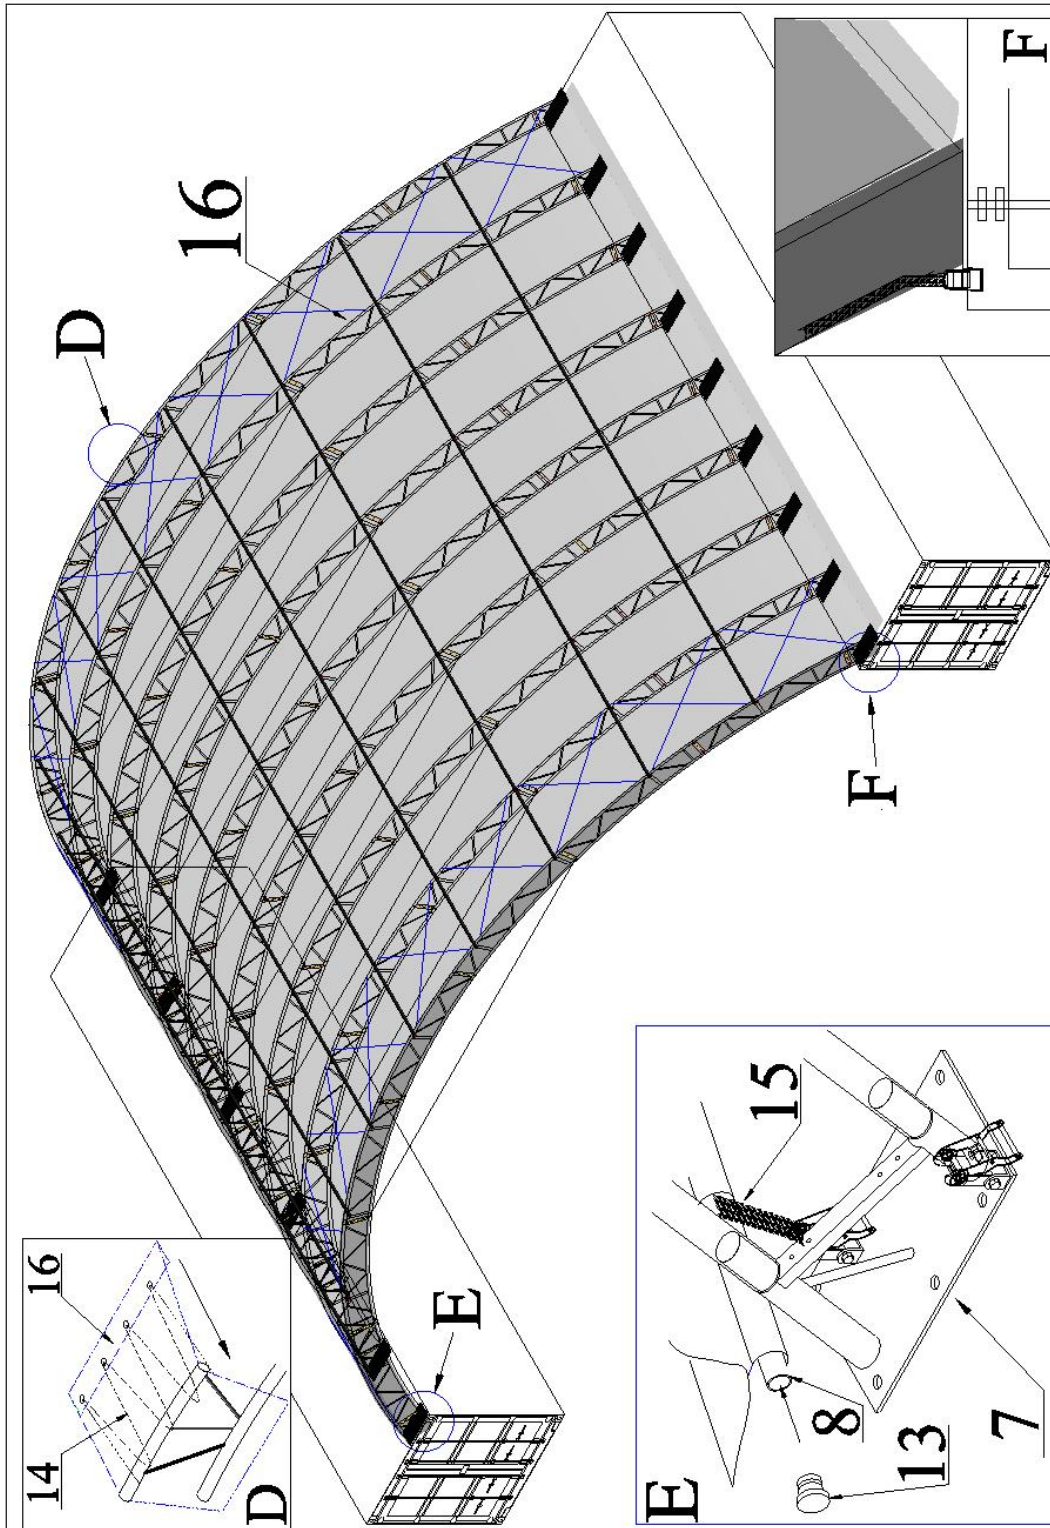

Now your assembly is completed.